


Talbot *Pushfit* — Assembly Instructions


The installation recommendations shown below cover the range of Tyco Waterworks UK (Talbot) Pushfit connections

1

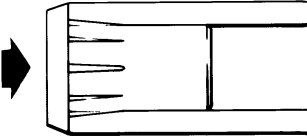


For metric British standard pipe only. Push the correct liner fully into end of pipe.

2

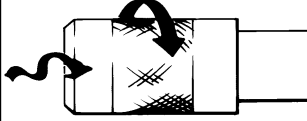


For imperial B.S., DIN & ISO pipe only, cut and bevel the pipe (ie chamfer) using a beveller tool. No liner is required

3

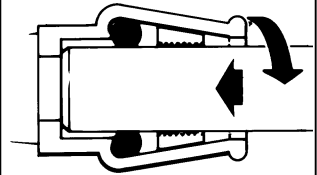

Push the pipe fully into the fitting with a slight twist.

4

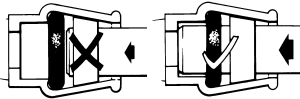

Ensure that the pipe passes two points of resistance and is fully seated.

Atlantic Plastics Ltd t/a Tyco Waterworks
Edison Road
Hams Hall Distribution Park
Coleshill
Birmingham
B46 1AB
UK

Telephone: +44 (0)1675 437 900

Fax: +44 (0)1675 437 909

E-mail: wwinfo@tyco-valves.com

Web: www.tycowaterworks.com

tyco / Flow Control / **Tyco Waterworks**


We reserve the right to change the design and specification without notice.

© Tyco 2009

Talbot *Pushfit* — Dismantling Instructions


The installation recommendations shown below cover the range of Tyco Waterworks UK (Talbot) Pushfit connections

1

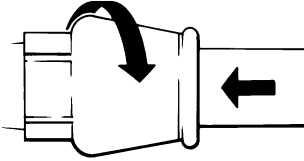


If possible, first rotate the fitting and push it towards the pipe.

2

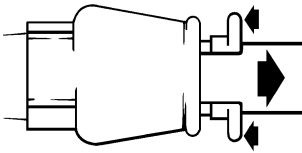

Push the extractors home and withdraw the pipe.

3

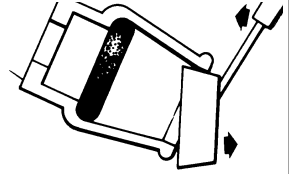

Extract the grip ring using a screwdriver. Do not re-use the grip ring.

4




Extract the 'O' ring and inspect it. Replace it if it is damaged.

5



Insert a new grip ring by forming a figure '6' and pressing in.

6

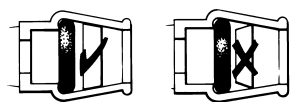

Grip ring must be this way round.

tyco / Flow Control / **Tyco Waterworks**

We reserve the right to change the design and specification without notice.

© Tyco 2009